



instructables

# In Channel Internal Wind Rain Deflectors Fitting Clips Replacements for Heko G3 Climair Aftermarket Stainless Steel Install Fitting Instructions



by x8rltd

## The Problem

If your deflector retaining clips have been lost or damaged this can affect the fitment of your deflectors.

Without these clips the deflectors can become loose and rattle even at low speeds. It is also common for the auto safety feature of electric windows to kick in making the windows wind back down as sensing an obstruction in the window.

## Symptoms of the fault

Lost or damaged clips

## Vehicles affected and compatibility

Our clips will fit Heko and other aftermarket brand wind deflectors.

## Our solution


Install our clips and improve the fit of your wind deflectors.

Our clips will ensure the deflectors stay in place securely when the glass is down. Also, clips will ensure the glass doesn't make contact with the deflectors. Our clips fit in exactly the same way as the OEM part and are constructed of stainless steel so will not deteriorate like some similar products.



## Step 1: Fit Your Wind Deflectors

Open the window of your vehicle and carefully fit the wind deflector as per the manufacturers instructions.

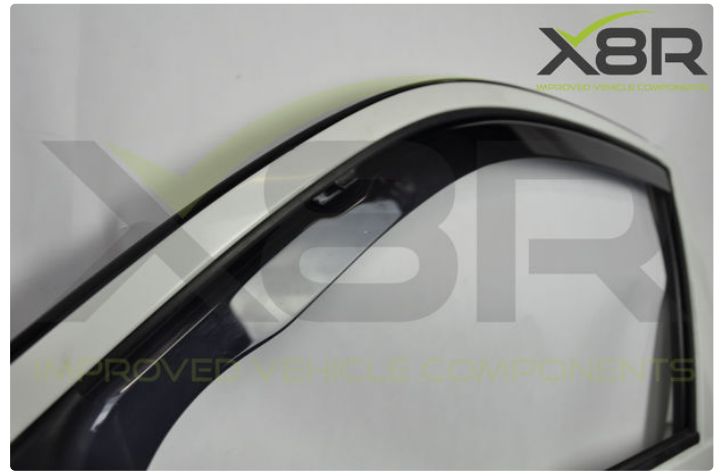

## Step 2: Fit the Clips

These clips are designed to fit in the channel between the wind deflector and the rubber window seal with the small tooth on the side facing in towards the interior of the car, which will grip on the rubber seal, stopping the clip from becoming loose and falling out.






---

### Step 3: Position the Clips

Before fully inserting the clips in the channel, position them where you need them. Most applications will require multiple clips in various positions around the window channel.

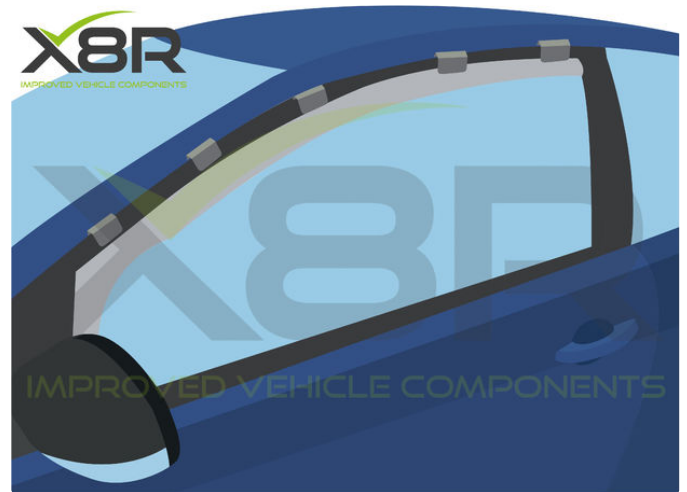

## Step 4: Fully Fitted Clips

Once you are happy with the locations for the clip, use a large flat headed screwdriver to firmly push upwards, moving the clip further up into the channel and securing it in place.

Repeat this process as many times as you feel necessary until the wind deflector feels secure and tight. Test the window to make sure it operates in a normal fashion, making sure there are no obstructions.

This completes the repair. If you need any further

guidance on this install or would like to purchase the parts shown please call us on +44 01843 446643 or email us at [sales@x8r.co.uk](mailto:sales@x8r.co.uk). Please also check out our instruction guide on YouTube. [www.x8r.co.uk](http://www.x8r.co.uk)

Installation is carried out at installers risk, if unsure please contact us or a professional, X8R Ltd cannot be held responsible for any adverse result of installing this product or any injuries caused by install, if in doubt ask a professional. All images and texts are copyright X8R Ltd 2018.

